


Quick Reference Guide


Parts Descriptions

Personal Phone

Backside View

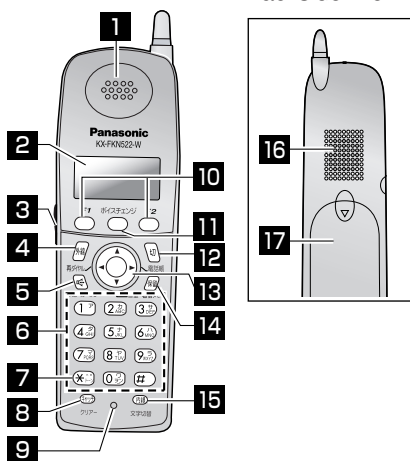

Base Unit

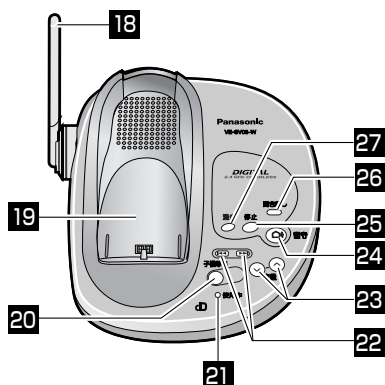


- 1** Earpiece
- 2** Liquid crystal display
- 3** Headset jack
- 4** Talk button
- 5** Speakerphone button
- 6** Numeral/Character buttons
- 7** Tone button (to switch to DTMF tone)
- 8** Flash/Clear button
- 9** Microphone
- 10** Multi-operation buttons
- 11** Voice change button
- 12** Off button
- 13** Redial button (再ダイヤル)
- Phone book button (電話帳)
- Volume control button (音量)
- 14** Hold/Caller ID button
- 15** Intercom/Text entry mode button
- 16** Speaker
- 17** Battery cover
- 18** Antenna
- 19** Charger
- 20** Page button
- 21** In Use indicator
- 22** Skip & repeat buttons
- 23** Volume control buttons
- 24** Auto answer button & indicator
- 25** Stop button
- 26** Playback button
- 27** Erase button


■本機は日本国内用です。国外での使用に対するサービスは致しかねます。
 ■This product is designed for use in Japan.
 Panasonic cannot provide service for this product if used outside Japan.

Basic Operations



Personal phone (KX-FKN522)

■ To make a call

Lift the personal phone from the base unit and press  (4).

→ Dial.....To end the call, place the personal phone on the base unit or press  (12).

■ To receive a call

When the phone rings... → Lift the personal phone from the base unit or press . → Talk.....To end the call, place the personal phone on the base unit or press .



■ To place the current call on hold

Press  (14) during a call.




■ To retrieve the held call

Press  or .

■ To make a call using the speakerphone (Hands-free talk)

Press  (5). → Dial. → Talk to the microphone.....To end the call, place the personal phone on the base unit or press .

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings... → With the personal phone placed on the base unit, press  or . → Talk to the microphone.....To end the call, press .

■ To hear recorded messages while away from home (Remote control)


Preparation before you leave home

Store a remote control number.

Press  # 0 0 6.

→ Enter the desired 4-digit number.

→ Press .

When you leave home, press  留守. (The Auto answer indicator on the base unit turns on.)

To hear messages

Dial your home phone number. → While the outgoing message is played back...

→ Enter your remote control number.

→ Announcement → Press 2.

→ You will hear recorded messages if any.


NOTE

- This operation can be made only from telephones which can send DTMF signals.


Base unit (VE-SV03)

■ To use TAM


(Telephone Answering Machine)

When you leave home, press  留守 (24). (The Auto answer indicator (24) on the base unit turns on.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the Auto answer indicator on the base unit starts flashing.

→ When you return home, press  留守 to play back the messages.

The Auto answer indicator turns off and the answering mode is deactivated.

To erase the message, press  消去 while listening to the message you want to erase.

To play back the message while TAM is

deactivated, press  聞き直し (26).

*Up to 50 messages can be recorded for approx. 12 minutes in total.

- The number after the button shows the location of the button described in the previous page.